



X550 Desktop Virtualization Kit with vSpace™



User Guide

Important Notices

Please note that reproduction of this User Guide in whole or in part, without express written permission from NComputing, is not permitted.

NComputing reserves the right to make improvements and/or changes to this User Guide and to the products, programs and/or specifications described herein at anytime without notice. Information contained in this document may have been obtained from internal testing or from a third party. NComputing shall not be liable for any direct, indirect, special, incidental or consequential damages in connection with the use of this material. The latest version of this User Guide can be downloaded from the “Download center” in the support section of the NComputing website at: www.ncomputing.com

Refer to the Limited Hardware Warranty applicable to your region for information on what is and what is not covered by the warranty, your responsibilities, exclusions, and how to obtain service. It is your responsibility to download a copy of the warranty at the time of purchase to keep for your records. The warranty can be downloaded from the “Download center” in the support section of the NComputing website.

Please refer to the End User License Agreement (EULA) and Terms of Use (TOU) that are presented for your review during the software installation process. The information contained in these documents is very important. The EULA and TOU constitute agreements between you and NComputing and are accepted by you by installing and using the product. It is your responsibility to print a copy of the EULA and TOU directly from the installer in order to keep for your records.

This product gives users shared access to computer resources. It is not a computer, and may not support all software applications, especially high-resolution graphics applications or 3D games that are designed to be supported by stand-alone computers. Similarly, it may not support all hardware peripherals that are designed to be supported by stand-alone computers.

Refer to your computer operating system and application software vendors' license agreements for information on using these products in a shared access environment. Additional software licenses may be required.

The NComputing hardware and software products described in this user manual are protected by numerous granted and pending U.S. and international patents.

© 2008 by NComputing Inc. All rights reserved. NComputing is a registered Trademark of NComputing Inc. – USA. Microsoft and Windows are registered trademarks of Microsoft Corporation. All trademarks are the property of their respective owners.

Contents

Safety Information.....	4
Regulatory Compliance.....	5
FCC Information.....	5
MIC Certification Information.....	6
Product Overview.....	7
Minimum System Requirements.....	8
Host PC.....	8
Access Devices.....	8
Connection Cables.....	8
Install the Hardware.....	9
Install the X550 PCI Card.....	9
Connect Peripheral Devices.....	11
Install the NComputing vSpace Software.....	12
Product Registration.....	18
Online Registration.....	20
Offline Registration.....	21
Uninstallation and Reinstallation.....	24
Updating the vSpace Software.....	25
Using the vSpace Console.....	27
Local Settings.....	29
X550 PCI Card.....	29
Information & Settings.....	35
USB-Device Assignment(s).....	38
Warranty and Troubleshooting.....	41
Glossary.....	42

Safety Information

Refer to the following to prevent any physical injury or loss of assets caused by damage to the product.

A user must read this User Guide carefully before use and properly follow the instructions.

- Make sure that the place of installation is not too hot (above 35°C), too cold (below 0°C), or too wet (above 85% relative humidity).
- Avoid any severe impacts to the product
- Make sure that the product is not exposed to direct sunlight or any hot machinery.
- Please keep the product away from any items which have strong magnetic properties.
- Do not disassemble, repair or rebuild the product.
- Please properly route all cables and power cords to avoid a tripping hazard. An electric shock, fire, damage to the product or physical injury may occur as a result of tripping over the cable.
- Please disconnect the Cat 5e or Cat 6 cable from the product when it is not in use for a long period of time.

Regulatory Compliance

FCC Information

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment to a power outlet on a circuit different from which the receiver is connected
- Consult your dealer or an experienced radio TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. For enhancing performance and reliability, we recommend using FTP or STP cable between the X550 PCI card and the XD2 devices.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

MIC Certification Information

X550 PCI Card

- 1.기기의명칭(모델명): NComputing X-series(X550)
- 2.인증받은 자의 상호: 엔컴퓨팅 주식회사
- 3.제조자/제조국가: 엔컴퓨팅 주식회사/한국
- 4.제조년월: 제품 참조



NCC-X550(B)

XD2 Access Device

- 1.기기의명칭(모델명): NComputing X-series(XD2)
- 2.인증받은 자의 상호: 엔컴퓨팅 주식회사
- 3.제조자/제조국가: 아이온/중국
- 4.제조년월: 제품 참조




NCC-XD2(B)

이 기기는 가정용(B급)으로 전자파적합 등록을 한 기기로서 주로 가정에서 사용 하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

제품의 성능 및 신뢰성 향상을 위하여 X550 PCI Card 와 XD2 Access Device의 연결 시 FTP 혹은 STP Cable의 사용을 권장 합니다.

Product Overview

The X550 desktop virtualization kit includes a license for NComputing vSpace software, one X550 PCI card, and five XD2 access devices. NComputing vSpace desktop virtualization software divides your host PC's resources into independent virtual workspaces that give each user their own full PC experience. The X550 PCI card connects your PC to each of the five XD2 access devices through a standard Category 5e or shielded Category 6 cable (sold separately). Each XD2 connects to each user's keyboard, monitor, mouse and speakers. All these components work together to efficiently harness the excess computing capacity of your PC so multiple users can share it at the same time.

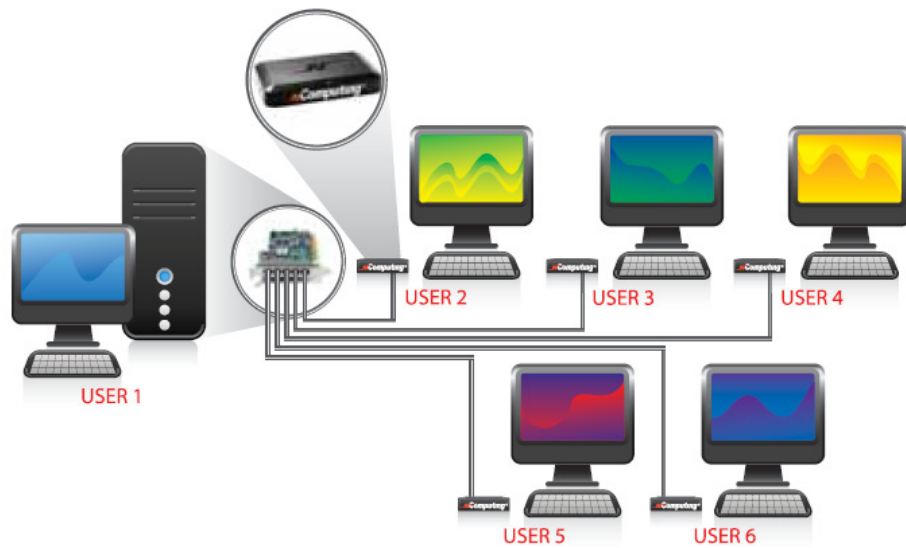

One Kit Enables Six Users to Share a PC

One X550 kit adds five users to a PC. Including the first user that works directly on the PC, this means that six users can share a single PC with one kit. With two X550 kits, you can add ten users to a PC for a total of eleven users sharing one PC.

Minimum System Requirements

Host PC

The host PC operating system can be Windows Server 2003 R2 SP2 (Standard or Enterprise Edition, 32-bit) or Ubuntu Linux. Please visit the support section of the NComputing website for the latest operating system support information.

For one X550 kit, a host PC should have at least the following:

- A 2.4 GHz processor or any dual-core processor
- 1 GB RAM
- One free full-height PCI slot

For two X550 PCI cards, a host PC should have at least the following:

- A 3.5 GHz processor or an equivalent dual-core processor
- 2 or 3 GB RAM
- Two free full-height PCI slots

Access Devices

For each XD2 access device you will need:

- PS/2 keyboard
- PS/2 mouse
- Monitor (supporting 800x600, 1024x768, 1280x1024 or 1440x900 resolution)
- Optional: speakers or headphones
- Optional: USB devices and USB cables (connect directly to host PC and can be assigned to each station via the vSpace software)

Connection Cables

For each XD2 device you will need a Category 5e cable for lengths up to 5 meters or a shielded twisted pair (STP) or foil-screened twisted pair (FTP) Category 6 cable for lengths between 5 and 10 meters. All four wire pairs in the cable **MUST** be terminated correctly according to the Category 5e and Category 6 standards. Note that the signals being transferred across the cable are **NOT** Ethernet, so do not connect the PCI card or the XD2 devices to any Ethernet network equipment. Also, do **NOT** use Ethernet cross-over cables for the connection (cross-over cables swap wire pairs at each end).



DO NOT USE CROSS-OVER CABLES!



Colors should match on both ends of cable

Install the Hardware


Before attempting to install the X550 Kit, verify that your Windows or Linux OS is supported by vSpace, and that the OS is properly installed, updated and all devices viewable in the OS device manager are working properly. Also, check to be sure your package includes one X550 PCI card, five XD2 devices, the vSpace installation CD, and ten monitor mounting screws.

Install the X550 PCI Card

1. Disconnect all peripheral and power cables from the host PC.
2. Remove the host PC system cover.



3. Locate an available PCI slot for the X550 PCI card.

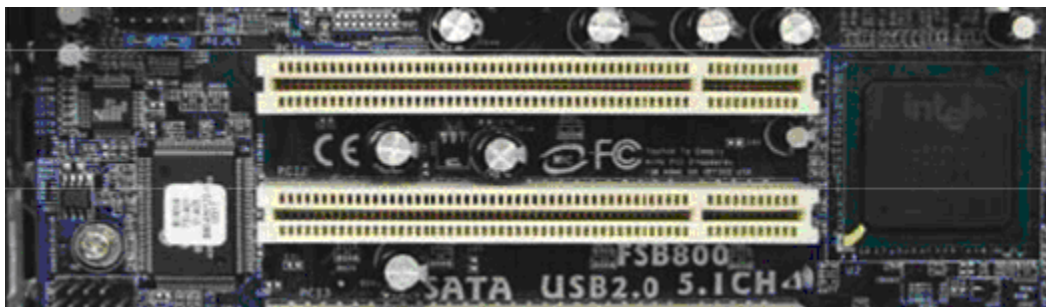

4. Insert one X550 PCI card and secure the bracket to the chassis with a retaining screw (or other fastening mechanism specific to your PC). Note: The X550 is a full-height PCI card.



Optional installation of a second X550 card

If the system has a second available PCI slot and you wish to use a second X550 kit, insert the second card into the available slot and secure the card to the chassis.

5. Replace the system cover and reconnect all peripheral and power cables.



Connect Peripheral Devices

Connect each access device to a port on the PCI card using high quality Cat 5e or shielded Cat 6 cables. These must be standard direct (not crossover) cables.


Maximum cable length between the X550 card and a user access device is:

Standard Category 5e UTP cable: up to 5 meters

Standard Category 6 STP or FTP cable: up to 10 meters

WARNING: You must NOT attach any Ethernet networking equipment, such as a hub, switch, or router, between the access device and the PCI card. The signals being sent from the X550 PCI card to the XD2 device are NOT Ethernet.

Connect the desired peripheral devices to each X550 access device. If you plan to use any USB devices, connect these directly to the host PC – these can then be assigned to each station with the vSpace software.

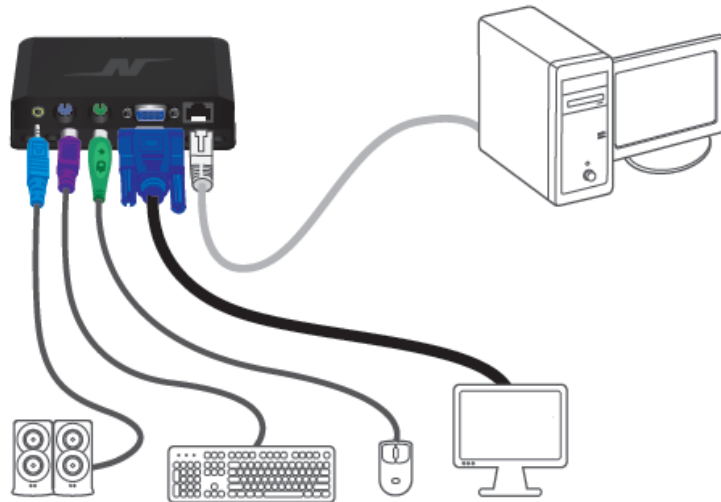

Using two screws (provided) you can attach the XD2 to the back of an LCD monitor that has VESA compliant mounting holes as shown below.



Install the NComputing vSpace Software

Turn on the host PC. After Windows starts, it will automatically bring up a dialog box called "Found New Hardware Wizard." (For Linux please visit the support section of the NComputing website and enter "Linux" into the knowledge base for the latest information on installation in Linux).




Do not install anything from Windows Update for the X550 PCI card. Simply click "Cancel" on this screen.

Now insert the software installation CD into the host PC's CD drive.

If the installer does not automatically launch, go to "My Computer," open the CD drive icon, and manually start the "Install.exe" application.

At the installation screen, click on the "Install vSpace for X-series" button.

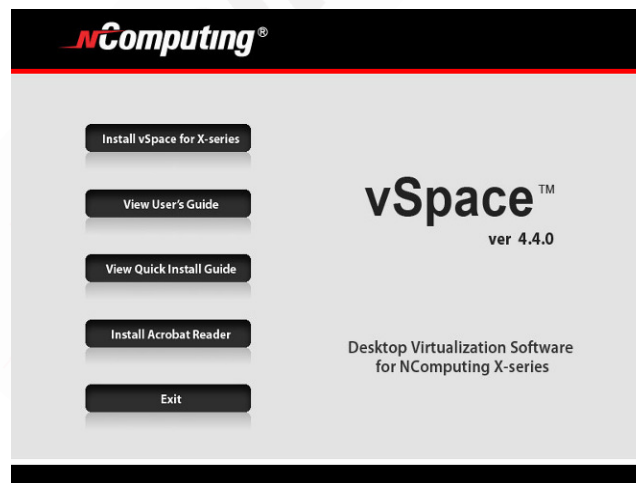


Before actual installation starts, the software attempts to connect to the Internet to compare the software version on the CD with the latest software version on the NComputing update server. If there is a later version on the NComputing server, a prompt will appear to ask if you want to use the version on the CD or if you want to download the latest version.

Note: If a new version is available, we recommend you download and install the latest version (included at no additional charge within the first 12 months of your purchase).


At the installation "Welcome" screen, close all running programs, and click on the "Next" button.




Read the antivirus and firewall warning screen, follow the applicable instructions, and click on the "Next" button.

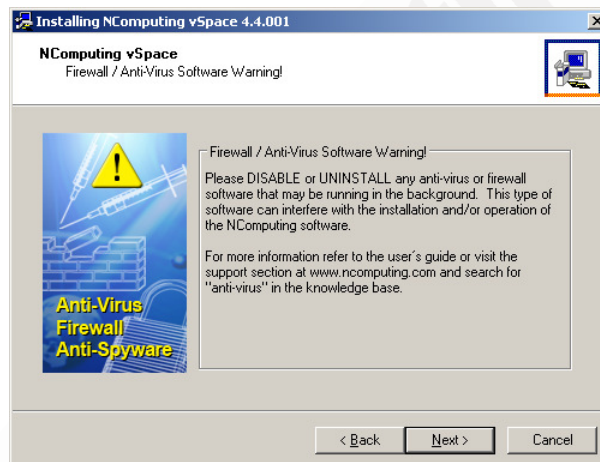


At the software license screen, read the vSpace software end user license agreement (EULA) and optionally print it out. When you are finished, click the "I agree" checkbox, then click "Next."

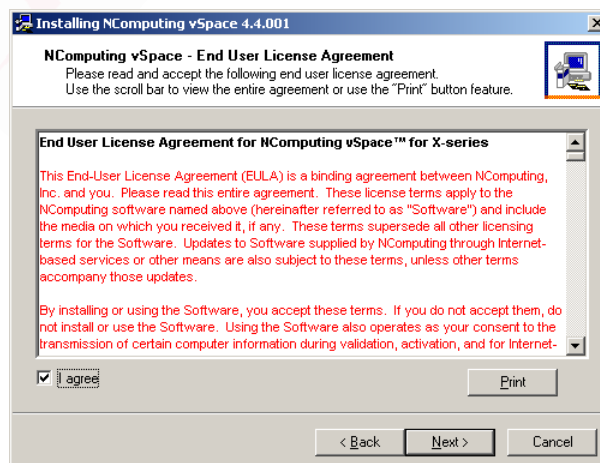


At the product terms of use screen, read the terms of use document and optionally print it out. When you are finished, click the "I agree" checkbox, and then click "Next."

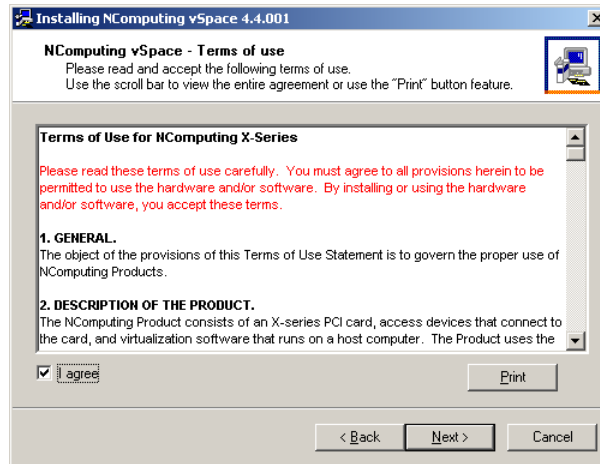

From the "Choose Destination Location" screen, you can choose to install vSpace in the the default location, or you can navigate to a different location and install vSpace there. When you are finished, click on the "Next" button.

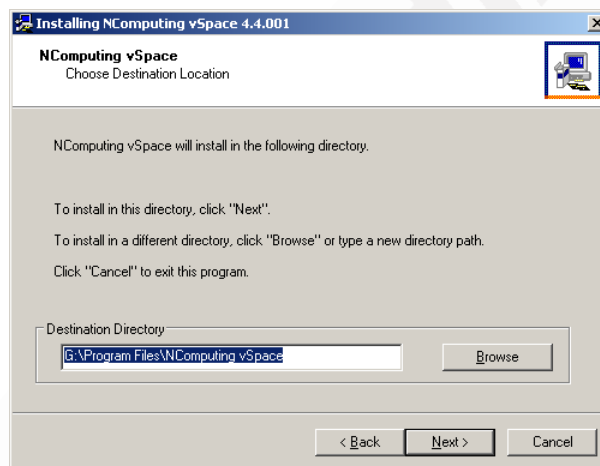


At the "Create Password for Administrator" screen, select whether to use or disable use of an administrator password. If you choose to use an administrator password, enter it and retype it. Click on the "Next" button.

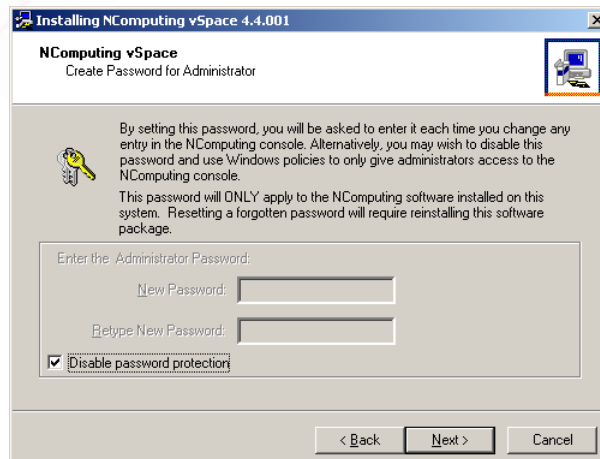


Note: This password only applies to the vSpace software installed on this PC. Resetting a forgotten password will require reinstalling the vSpace software.

Note: The NComputing Administration Console allows you to administer vSpace software and parameters associated with the access devices on this PC. It will automatically be installed on this system.


At this point, one of the following "ready to copy files" screen will be displayed. If this is the first time vSpace has been installed on this system, the "Create sys info file" will appear on the screen. Unless it is requested by support, we recommend you leave the box unchecked. Review your selections and click on the "Next" button.

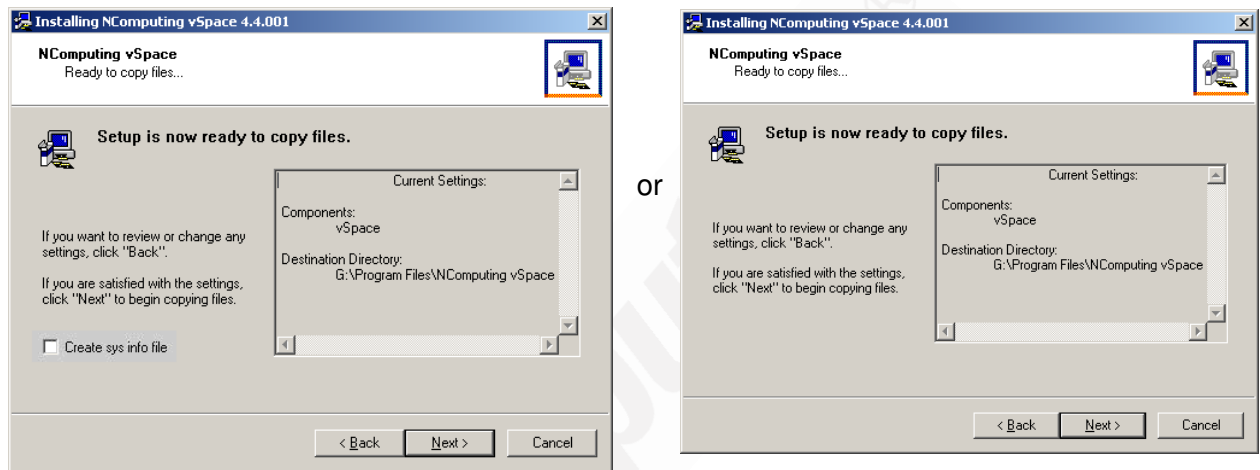


The vSpace software will then be installed.

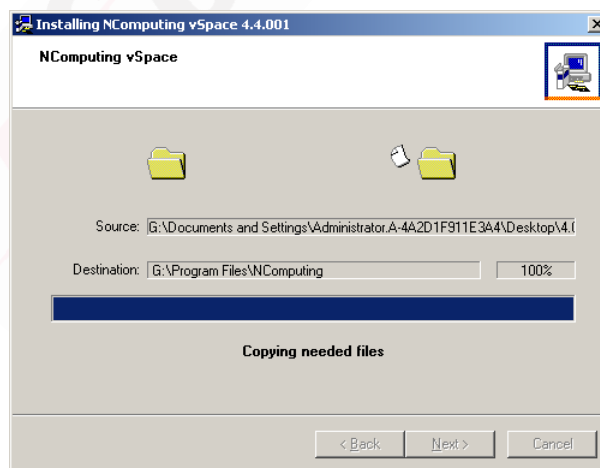


At the "Add new users" pop-up, select whether or not you would like to add new users to the system. If you click on the "Yes" button, the installation program will launch a screen to administer user accounts on the host PC. If you click the "No" button, the installation process will continue without bringing up the user administration screen.

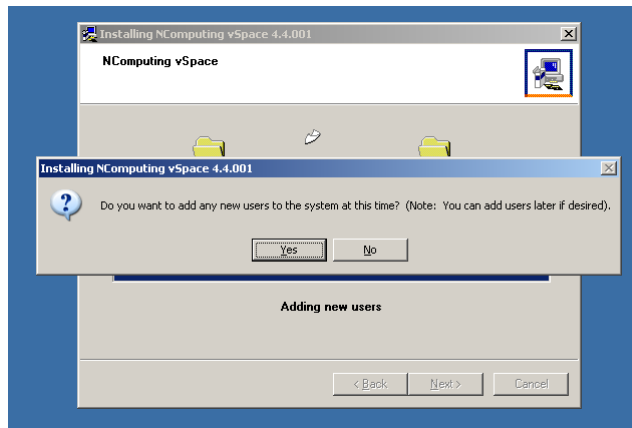

Note: It is recommended that all users have their own user accounts to enable control of their own settings. If you click on the “Yes” button, the screen shot below shows the “Local Users and Groups” Windows utility that will be displayed on an otherwise blank overlay screen. You can right click and select “New User...” to add each desired individual user account. When you are finished adding users, close the “Local Users and Groups” utility and you will be brought back to finish the vSpace installation process.

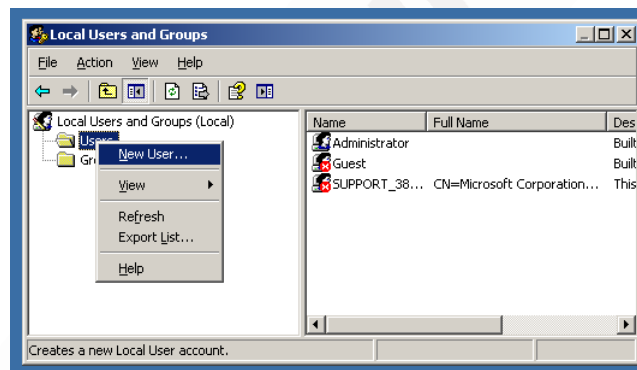

At the "vSpace successfully installed" screen, you have the opportunity to display and read the latest “readme” file. This file normally contains notes specific to the version of vSpace you have just installed. Then select whether or not to restart the computer.

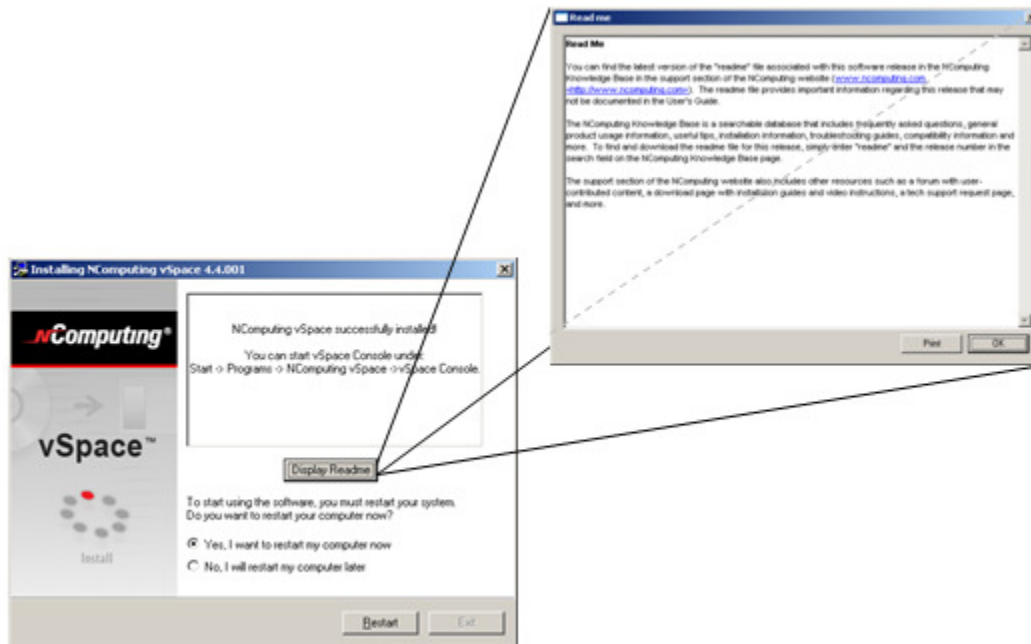

Note: You must reboot the computer before you can use the vSpace software or the access devices connected to the host PC.

Product Registration

The X550 PCI card contains an embedded hardware license which allow it to support up to five access devices. When first installed, the X550 starts a trial license which permits you to use full functionality of up to five attached access devices for the next 30 days. Until you register, a reminder screen like the one shown below will be displayed at least once a day on every user station. If you fail to register the X550 card with NComputing (online or offline) within the 30-day trial period, the PCI card will cease to function.



Allowing the card's trial license to expire will not prevent you from registering the card. You can always launch the vSpace Registration application from the PC's main screen, via


Start > All Programs > vSpace > vSpace Registration

and then perform either online or offline registration. Full PCI card functionality will then be restored once the card is successfully registered with NComputing.


NOTE: If you have two X550 cards installed in the system, the vSpace Registration application will present the option of registering both cards at the same time.

NOTE: In addition to extending the X550 license beyond the 30-day trial period, registration entitles you to 12 months of vSpace software updates and access to NComputing technical support.

Select "vSpace Registration" from the Windows Start menu.

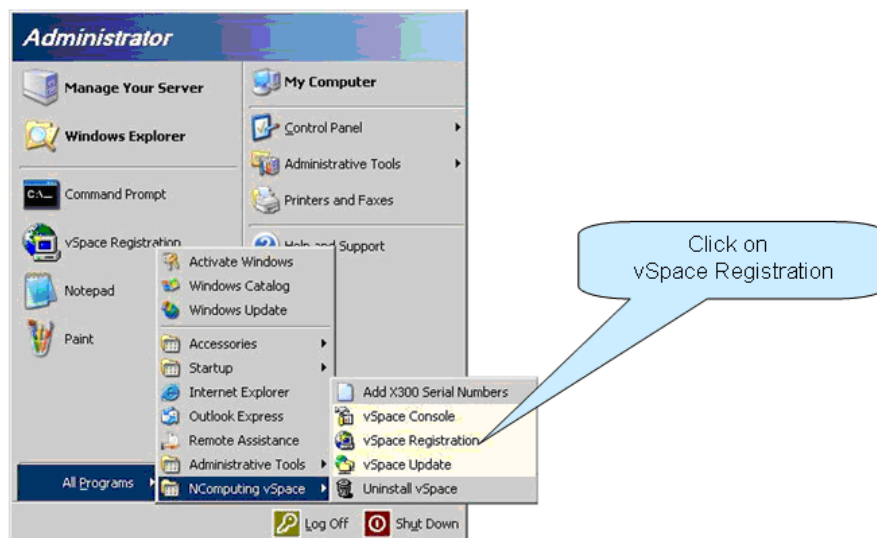


At the registration program “welcome” screen, if vSpace password protection is turned on, you will need to enter your password. Then Click the "Next" button.

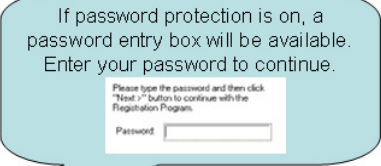

All fields in this screen must be completed. When finished, click the "Next" button.

vSpace Registration Process

Collecting information about your system...
Please fill in the following fields




Name : Tom Customer
Company : Company a
Country (select) : United States of America
Address : 1 Lagoon Drive
City : Redwood City
State/Province : CA
Zip : 94065
E-mail : oooooo@ncomputing.com
E-mail (re-enter) : oooooo@ncomputing.com
Phone : 555-1212
Reseller/Dealer Name : My Dealer
Type of Use (select) : Manufacturing

< Back Next > Cancel

The "Select registration method" screen allows you to pick how you will register your X550 PCI card.

Remember that successful registration is necessary for the X550 card to function past the initial 30 days.


You can select to register either "On Line" or "Off Line," and after selecting the desired registration method, click on the "Next" button.

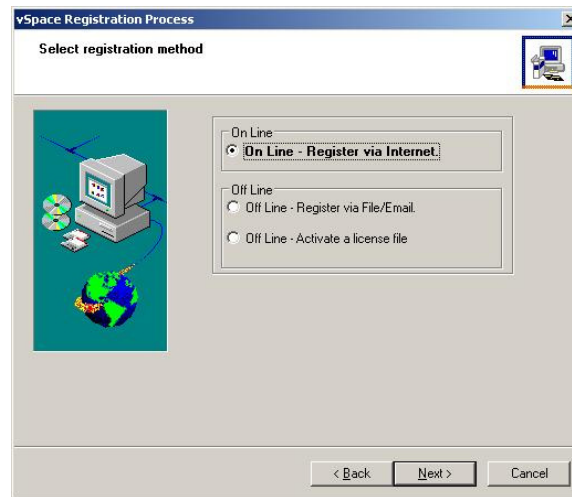


If you choose online registration, follow the instructions in the next section. If you have chosen offline registration, skip ahead to that section.

Online Registration

When you select to register online, the screen presented allows you to select what serial number(s) to register. The window provides a list of X550 PCI card number(s) read directly from the card(s). For each serial number, the window shows if it is registered or not yet registered. Any unregistered PCI card(s) will have the appropriate box checked. Click on the "Next" button to proceed.

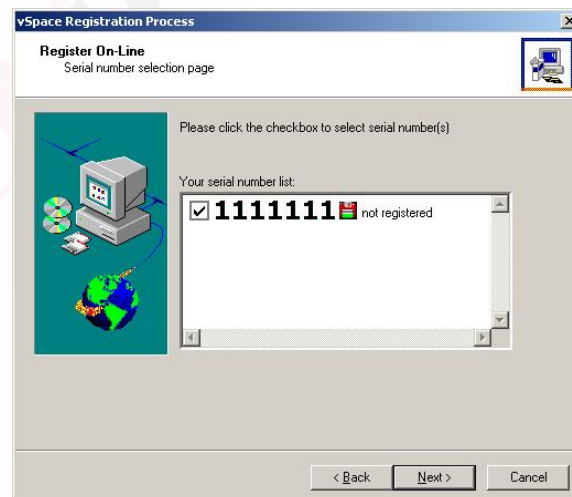

In the "Ready to register On-Line" screen, you will see the user information previously entered and the PCI card numbers chosen for registration. Confirm that the information is correct and click on the "Next" button to complete the process.

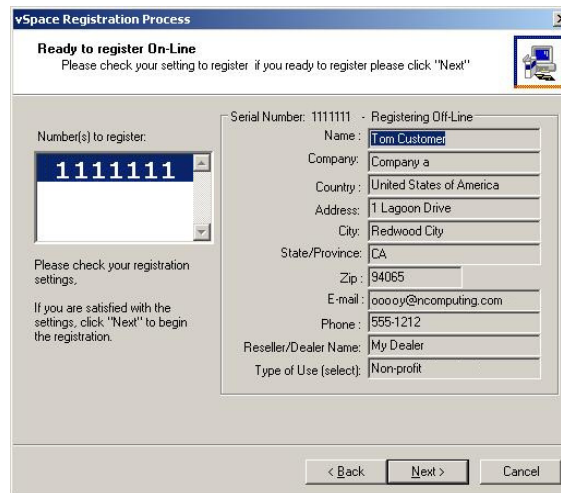

vSpace Registration Process

Ready to register On-Line
Please check your setting to register. If you are ready to register please click "Next".

Number(s) to register:
1111111

Please check your registration settings.
If you are satisfied with the settings, click "Next" to begin the registration.

Serial Number: 1111111 - Registering Off-Line

Name: Tom Customer
Company: Company a
Country: United States of America
Address: 1 Lagoon Drive
City: Redwood City
State/Province: CA
Zip: 94065
E-mail: ooooy@ncomputing.com
Phone: 555-1212
Reseller/Dealer Name: My Dealer
Type of Use (select): Non-profit

< Back Next > Cancel

You will then see a registration progress bar on the "On-line Registration process" screen. Once the online registration process has completed, you can view the results, including which PCI card(s) were successfully registered. Click on the "Finish" button.



vSpace Registration Process

Registration result page
thanks for registering

Registration was finished successfully!


Serial number 1111111 was registered successfully!

Finish Cancel


Offline Registration

In the offline registration function, you will create a file containing the PCI card number and the user registration information that must be emailed to registration@ncomputing.com. Once a matching registration file has been emailed back, you will restart the "vSpace Registration" program and point the application to the location where you have stored the returned X550 license (see multiple screen shots below).


When you select to register offline, the screen presented allows you to select the serial number(s) to register. The window provides a list of X550 PCI card number(s) read directly from the card(s). For each serial number, the window shows if it is registered or not yet registered. Any unregistered PCI card(s) will have the appropriate box checked. Click on the "Next" button to proceed.

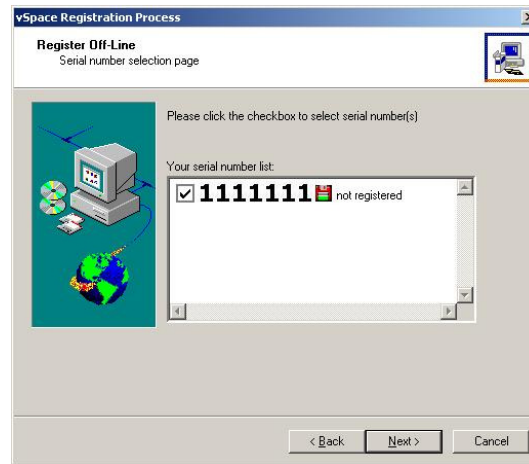

In the next window, you see the user information previously entered and the PCI card numbers chosen for registration. Confirm that the information is correct and click on the "Next" button to complete the process.

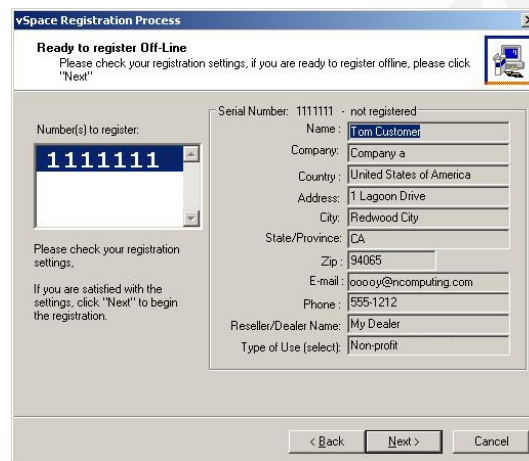

In the next screen, you select where to store the file that must be emailed to NComputing.and click the "Next" button.

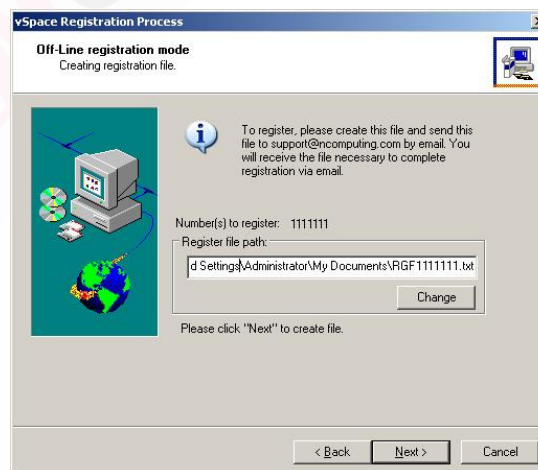


The offline registration file is then created and stored in the location specified.




Once the file is created, you can copy it to another PC, if necessary. Email that file to registration@ncomputing.com. You will receive an immediate email reply confirming that the registration information reached NComputing. If the registration system determines that the file is valid and that the X550 is entitled to be activated, you will receive an email within the next 2 or 3 minutes with an attached license file specific to that X550 card(s) and the PC in which it was installed.

Once you receive the license file, start the registration program again and select "Off Line – Activate a license file."

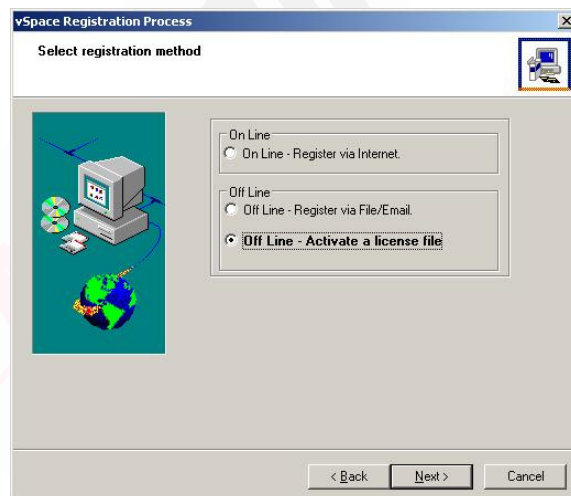

The next window allows you to specify a disk directory where you have stored your returned license file(s).

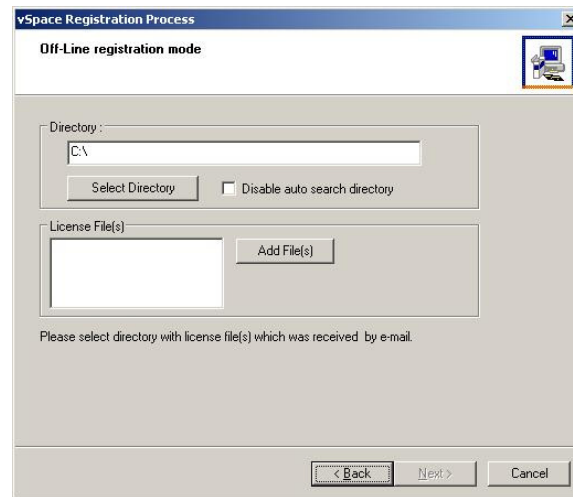

The registration program will search through the specified disk directory (it can be on a USB disk-on-key device) looking for the specific license file that matches the X550 PCI card(s) installed in this PC.



When the registration program locates the correct license file(s), the license removes the 30-day time limit from the PCI card(s). Click on the "Finish" button to complete the offline registration process.


Uninstallation and Reinstallation

To uninstall the vSpace software, select "Uninstall vSpace" from the "Start" menu. Follow the prompts and the vSpace software is removed from the host PC. You will be prompted to restart the host PC to complete the process.


You may reassign your vSpace software license to another computer to which you have moved and installed the X550 hardware, but only a limited number of times. Refer to Section 3 of the End User License Agreement that was presented during the install process for details.

Updating the vSpace Software

Once you have successfully completed the registration process, you can update the software directly over the Internet by selecting “Update vSpace” from the “Start” menu (provided you are within 12 months of the initial purchase or have signed up for extended maintenance).

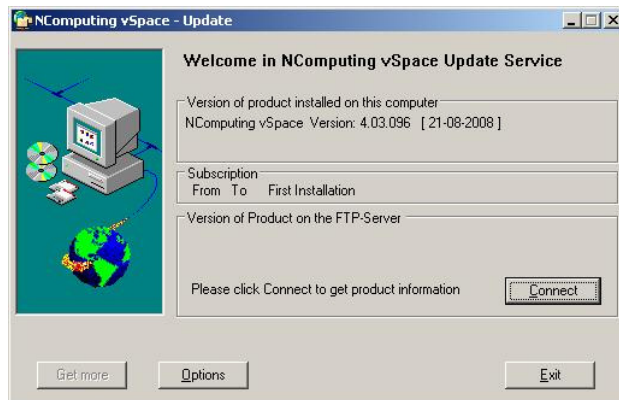



Note: If the “Enter Password” window appears, enter the administrator password.

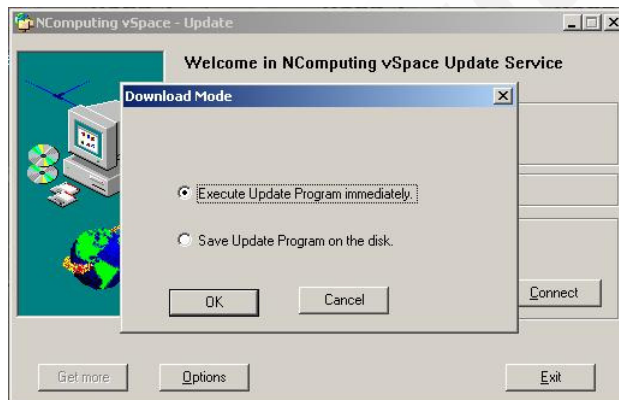


Click the “Options” button to select whether you want the update done right now, or if you would like to save the update program to a file. If you save the update to a disk, you can apply the update later, and/or you can carry the update to another PC to update that PC without connecting to the internet.

Clicking the “Connect” button checks for the availability of a software update.

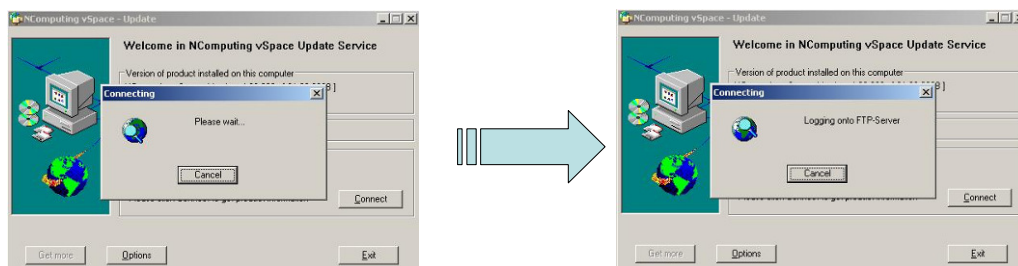

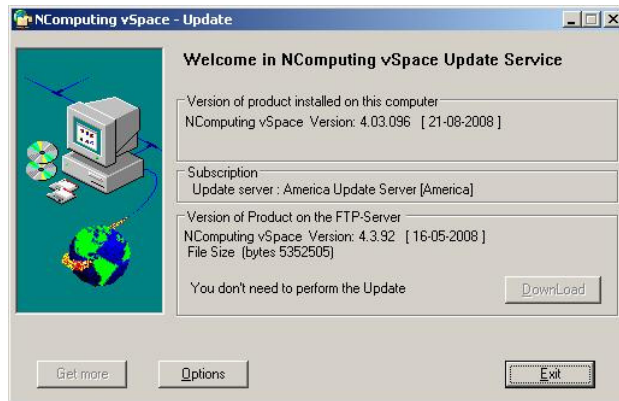

If there is a new version available, click on the “Download” button to start the update process. When the download is complete: 1) if you previously used the options button to select “save update program to disk,” the update will be saved to disk for you to apply later; 2) if you didn’t use the options button to modify the standard behavior, installation of the new version will begin.

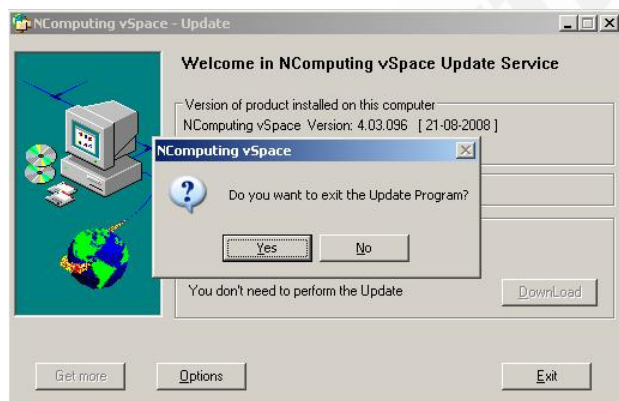


If there was no new version available, simply click on the “Exit” button. You will be asked to confirm that you want to exit, and then the update program ends

Using the vSpace Console

Start the management console from the Windows Start menu. The application is called, "vSpace Console."

You can also start the management console by right-clicking on the NComputing icon in the system tray and selecting "vSpace Management Console" or by simply double-clicking on the NComputing icon in the system tray.

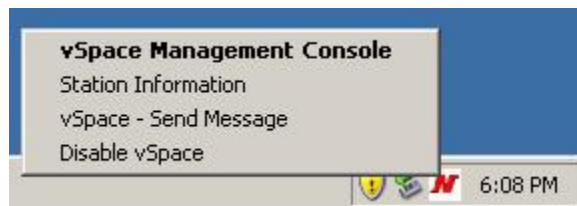


Other vSpace options available from a right-click on the system tray icon are:


- Station Information – tells you about the station where logged-in



- Send Message to other vSpace users on this system or to users on other vSpace enabled PCs that can be seen on this network

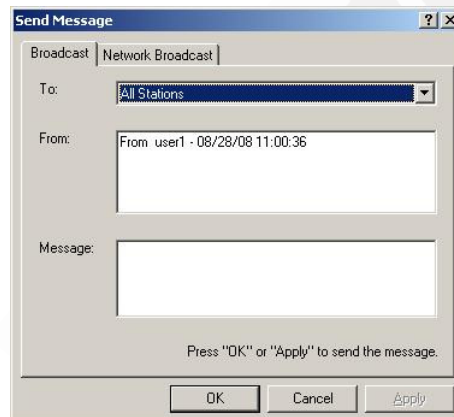

Send a message to users on the same vSpace PC as this user.

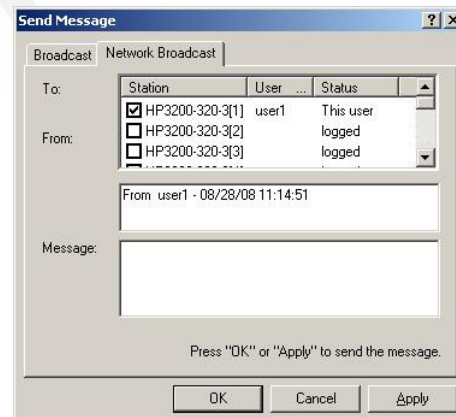

Send a message to users on any vSpace PC that can be "seen" on this network. (It may take 20 seconds or more for the "To:" window to auto-populate with a list of vSpace systems and stations that are visible on this network)



Example of message received from another vSpace user

- Disable (or Enable) vSpace



A left-click on the Disable (or Enable – if already disabled) option from the system tray icon brings up this “do you want to reboot” screen. Select “No” and the selected Disable/Enable action will take place after the next normal reboot time.


WARNING: SELECTING “Yes,” WILL **IMMEDIATELY** REBOOT THE SYSTEM WITHOUT WARNING OTHER USERS THAT MAY BE ACTIVE ON THIS SYSTEM.

After the system reboot completes following a “Disable vSpace” action, the following screen informs you that vSpace is not currently enabled and you are given the opportunity to enable it now.




Local Settings

The "Local Settings" tree allows you to see and change settings for this host PC. Right clicking on "Local Settings" and selecting "Export List..." lets you export a list (tab or comma delimited text file) that can be used to keep a record of which users (if any) are logged-in to each station at a point in time.

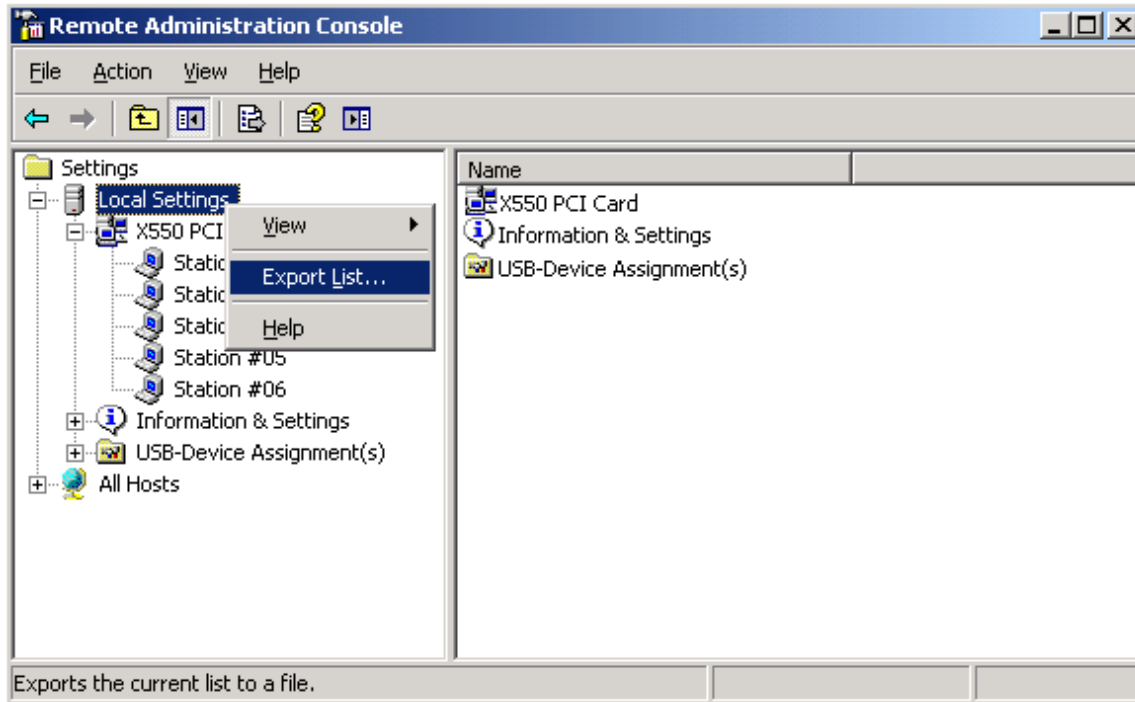

X550 PCI Card



The "X550 PCI Card" item shows information about all the vSpace sessions currently possible on that PCI card.

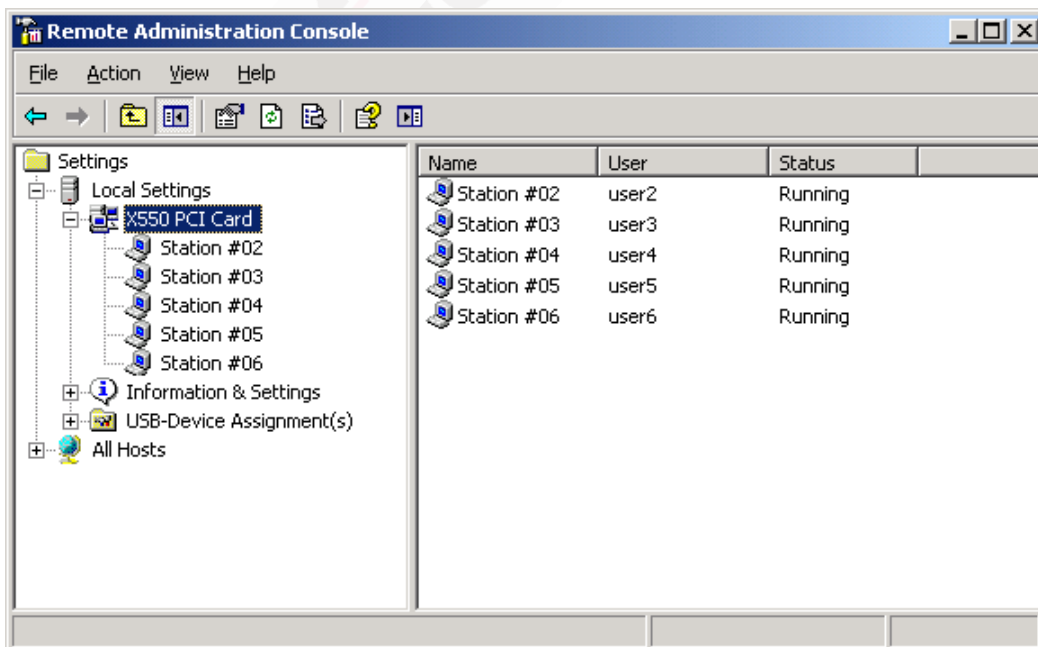



By right-clicking on the “X550 PCI Card,” you can:

- Display or modify the properties defined for that particular PCI Card.

NOTE: All stations attached to the same X550 PCI card will use the same resolution and color depth. Right clicking on the Properties option brings up a new window that allows setting the common monitor resolution and color depth. (A system reboot is required before the new resolution and/or color depth can take effect.)

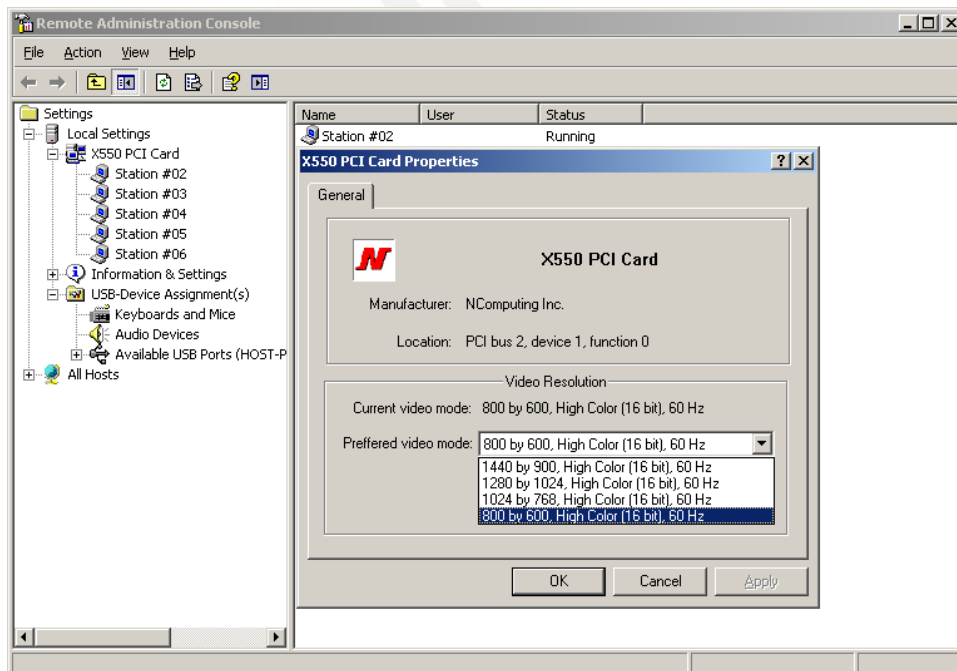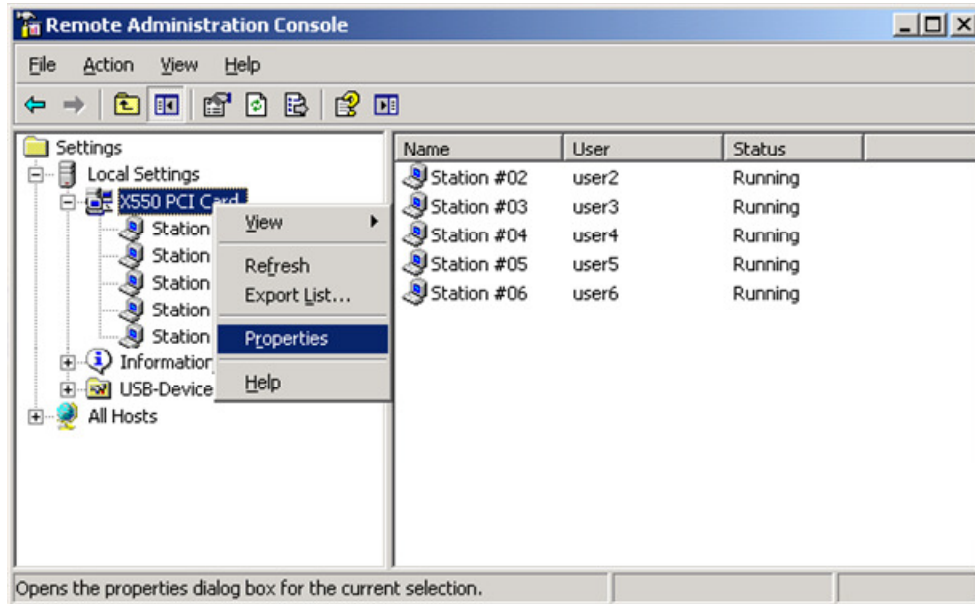


Right clicking a station in the left window, allows you to force that station (and associated user session) to stop.

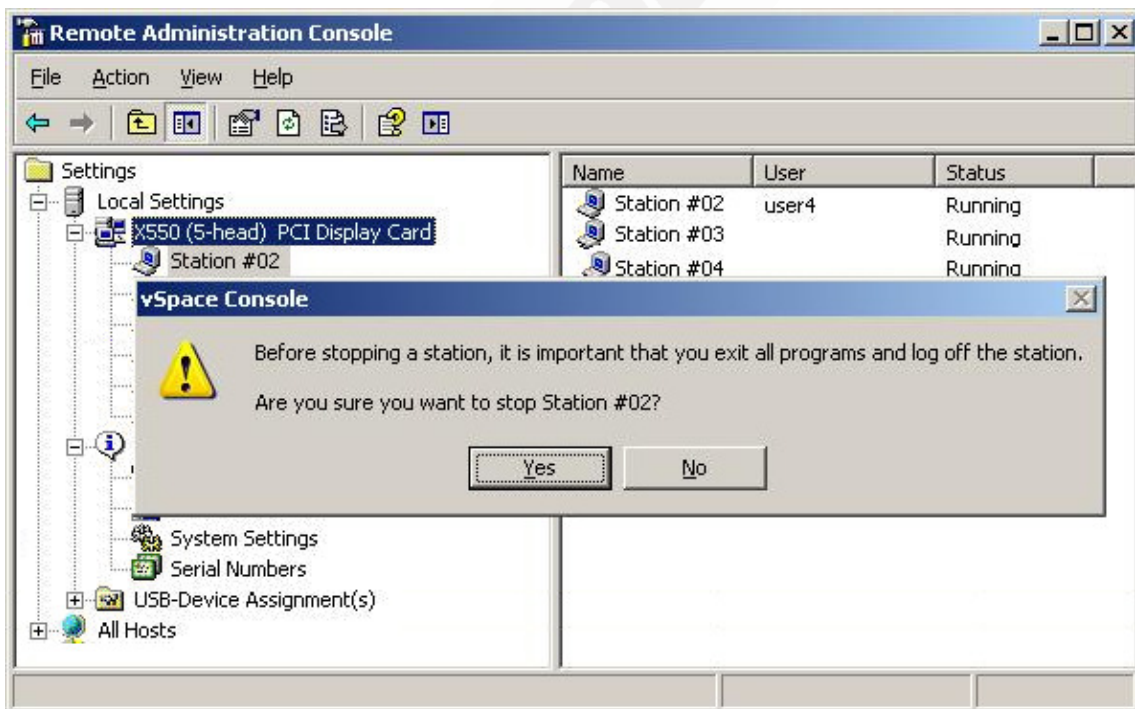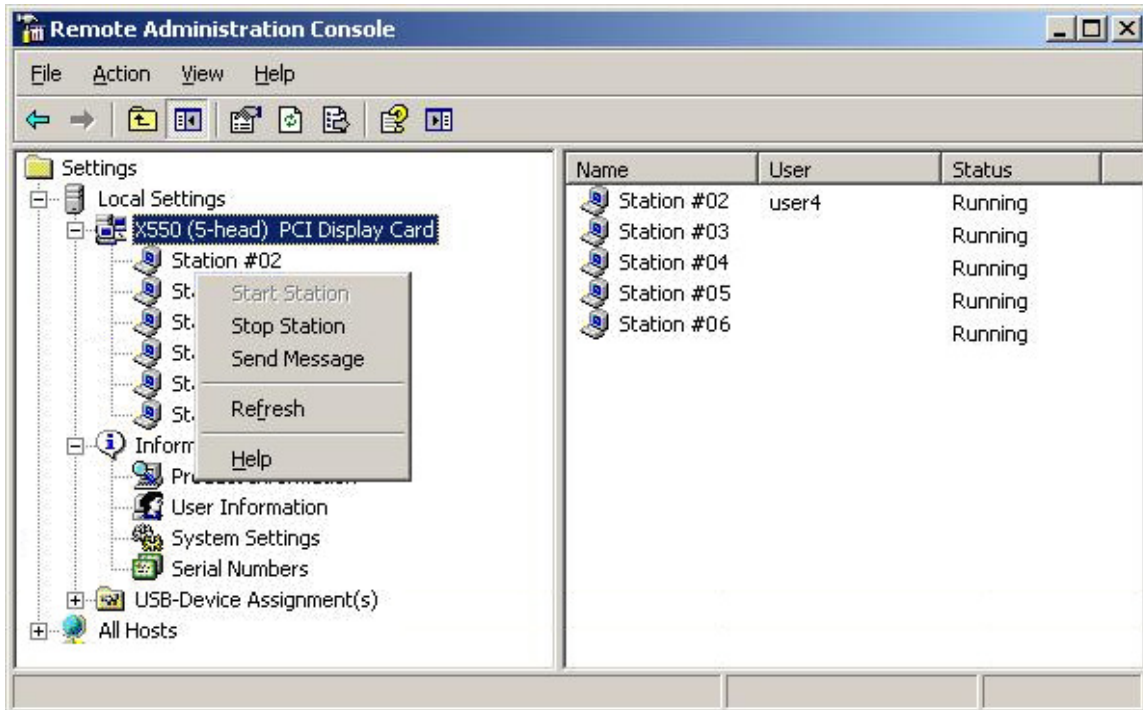


You can also choose to send a message to the screen of the user session currently running on that station. From this window, you can only send messages to stations attached to this PC, unlike the “send message” to any network user that can be done via the window accessed by right clicking on the NComputing system tray icon.

If you right click directly on a “station number,” you can access three tabs of available information. The “Application loaded” tab shows all the applications running on that station’s session.

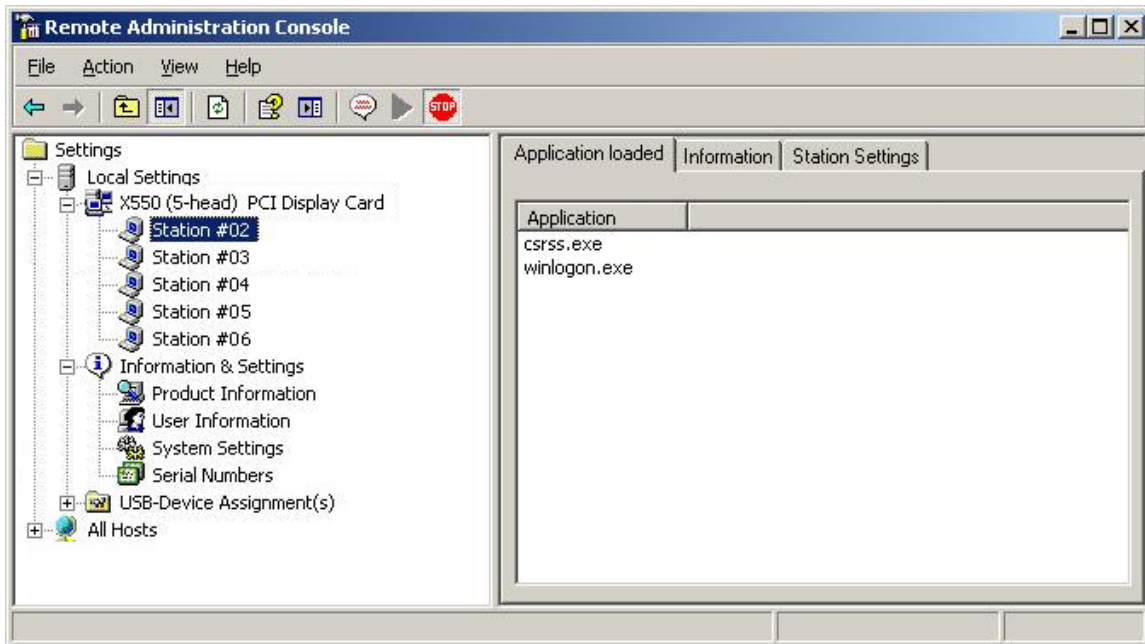


The “Information” tab shows the following information about the selected station’s session:

- **Station name:** the access device / station’s “provisioned name”
- **Session ID:** the vSpace session number for the session on this station.
- **Logged in user:** the username that is currently logged in.
- **Default user:** the default username for the terminal session. If one is not configured, it shows the last user that logged in.
- **Status:** the session status.
- **Logon program:** the filename that will run at session login (typically a kiosk type application)
- **Logon program folder:** the folder where the logon program exists.
- **AutoLaunch enabled:** the station’s automatic launch status.
- **Display Id:** the PCI card ID for the card to which this station is attached
- **Hardware Id:** the virtual hardware “name” for the station’s access device
- **Keyboard Id:** what type of keyboard interface is used (always PS/2)
- **Pointer Id:** what type of pointer interface (i.e., mouse) is used (always PS/2)

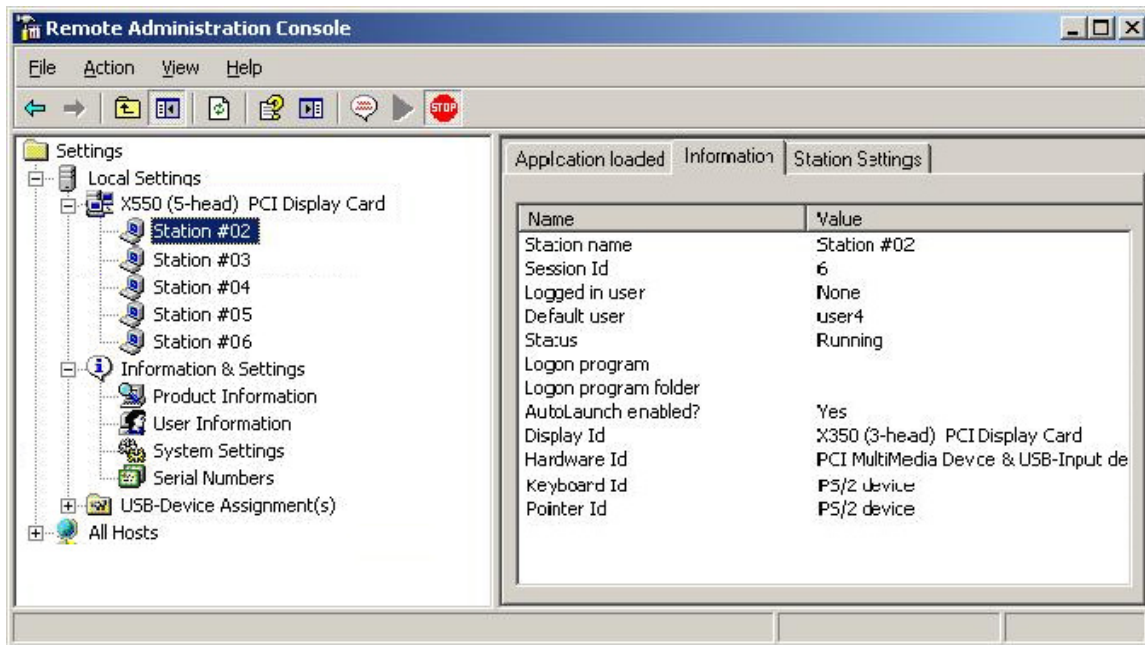

The “Station Settings” tab shows parameters that can be set for each station.

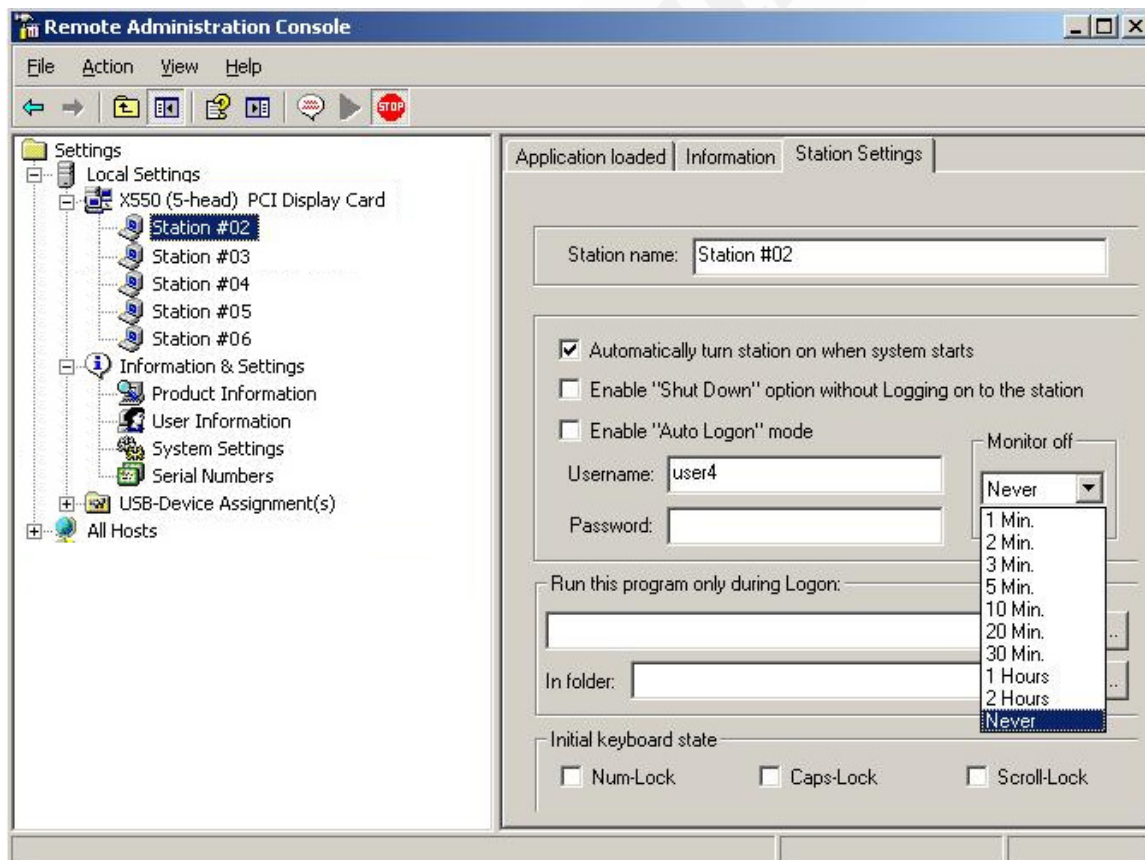

The parameters configurable from this window are:

- **Station name:** The “provisioned name” of the station.


- **Automatically turn station on when system starts:** If you unset this checkbox the station (and its monitor) will not start when the system boots up. This is normally left defaulted to on; otherwise, you will have to manually start the station from this administration console.
- **Enable “Shut Down” option without logging on to the station:** If this is turned on, access terminal users see the shut down options in their logon window and their “Start” programs tab. This would allow the host PC to be shut down without a valid user logon. If this is turned off, the shut down options are not visible until the user logs on.
- **Monitor off:** An individual X550 access device station consumes less than one watt of power, but the monitor attached to it consumes many times that (50-70 watts for an LCD monitor and well over 100 watts for a CRT). Thus the X550 PCI card provides an EXTRA “energy saver” setting that is independently configurable for each access device or station.. This drop down sets the amount of time the station can be idle before the X550 puts the monitor into a sleep state. Moving the mouse or hitting a key on the keyboard attached to the corresponding access device will wake the monitor back up. Selecting the value of “Never” means that the monitor will always remain powered on. (All normal screen saver functions still apply to prevent monitor “burn.”)
- **Enable “Auto Logon” mode:** When this is enabled and there is an entry in the “username” and “password” fields, the specified username is automatically logged in when the station starts.
- **Run this program only during Logon: and In folder:**
When you select a program to run and the folder where it is located, the program is started when there is a logon using the station. (This option along with the Enable Auto Logon are often used in setting up unattended kiosk environments.)
- **Initial keyboard state:** These check boxes allow setting the specific keyboard states that will be active when the stations starts. There are separate settings for Num-Lock, Caps-Lock and Scroll-Lock.

In the toolbar, there is a “Stop station button:.” When you select a station and click this button, a confirmation window asks if you want to stop the selected station. It also reminds you to exit all programs and log off the station.




Information & Settings


The "Product Information" item shows information about the installed terminal services software, such as product name, build date, version string and vendor information. (You cannot modify these values.)

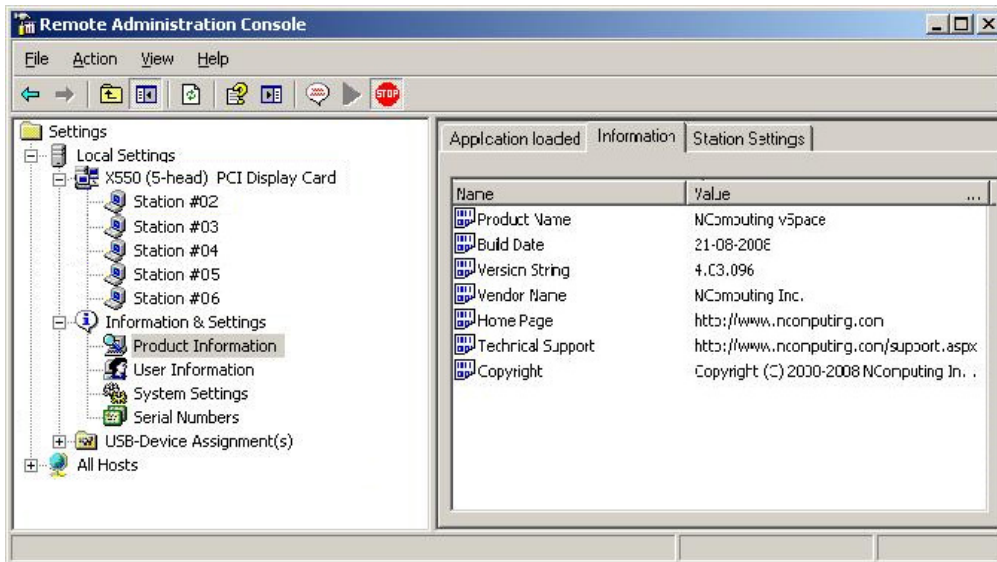

The "User information" item shows the information entered during the registration process, and double clicking an item brings up a window allowing you to change the value.

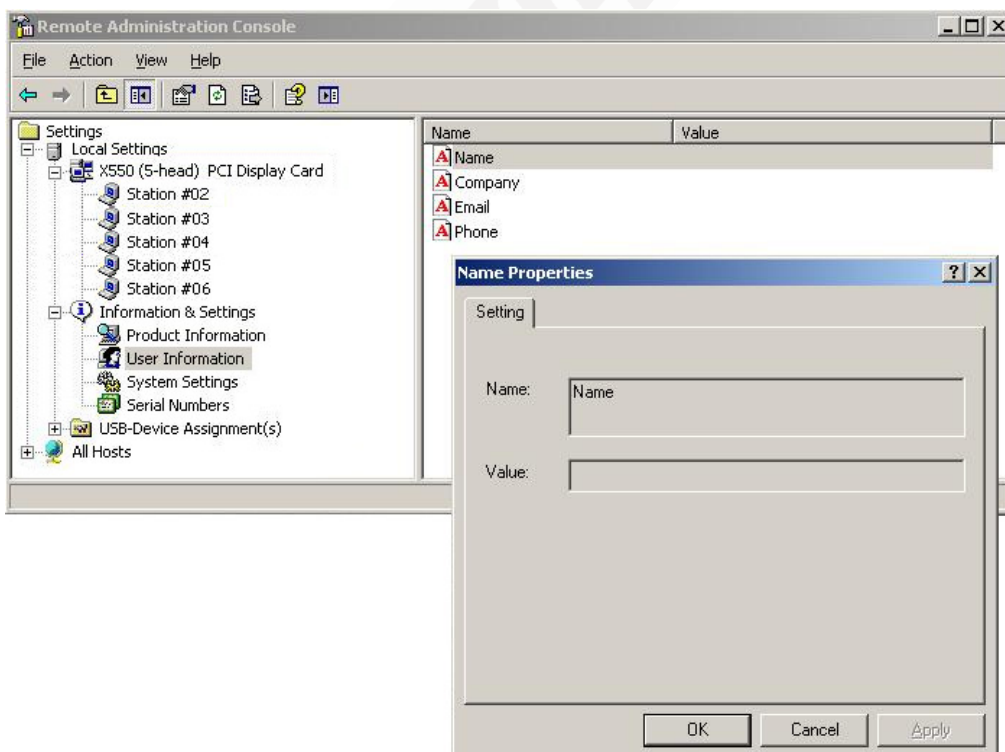

The "System Settings" item shows the following settings for the terminal services software. Double-clicking on the name of the setting allows you to adjust it, unless it is read-only, which is specified below.

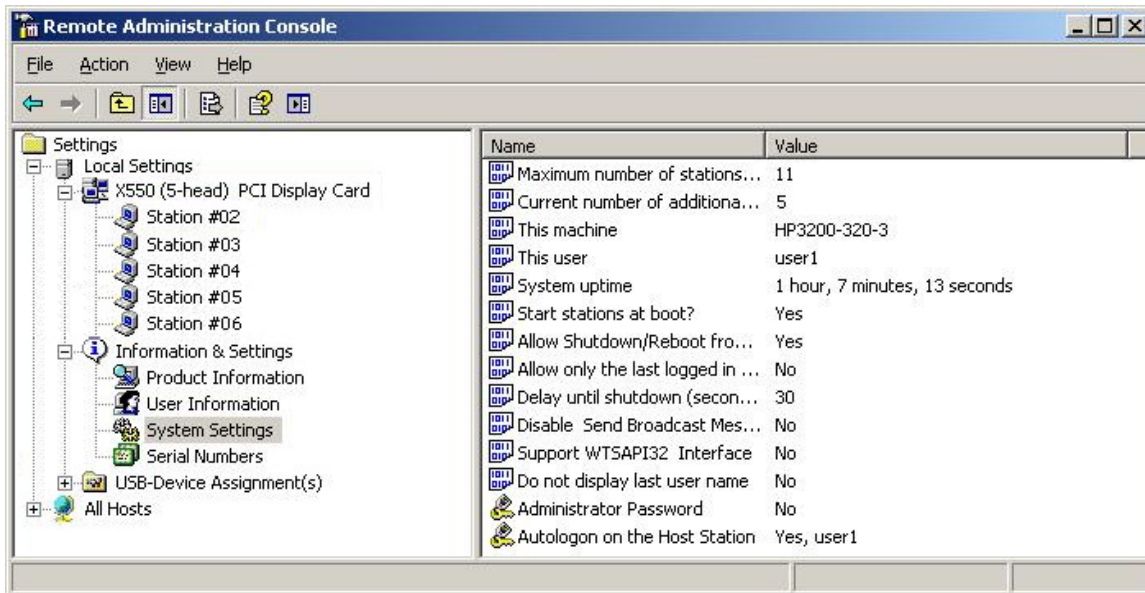


- **Maximum number of stations (incl. Host):** the maximum number of sessions the vSpace software is configured to support. This number includes the host PC. This setting is read-only.
- **Current number of additional stations:** the number of additional stations. This setting is read-only.
- **This machine:** the name of the host PC. This setting is read-only.
- **This user:** the currently logged-in user's username. This setting is read-only.
- **System uptime:** how long the system has been up. This setting is read-only.
- **Start stations at boot?:** whether or not the stations start when the host PC boots. You can set this either on or off.
- **Allow Shutdown/Reboot from stations:** whether or not the stations are given the option to shutdown or reboot the host PC. You can set this either on or off.
- **X550 card video mode settings:** The video mode settings for the X550 stations. You can set this to either 800x600 or 1024x768.
- **Allow only the last logged in user the shutdown of the system:** whether or not it is required that there is one and only one user logged on for the system to be shut down or rebooted. You can set this either on or off.
- **Delay until shutdown (seconds):** the default amount of time after a shutdown command is issued until the shutdown occurs. You can set the number of seconds.
- **Disable Send Broadcast Message:** whether or not the administrator has disabled broadcast messages. You can set this either on or off.
- **Support WTSAPI32 Interface:** whether or not the terminal services software has turned on support for the WTSAPI32 application interface. At times, this setting is


required for certain applications to behave properly. You can set this either on or off.

- **Administrator Password:** whether an administrator password is set. You can change the administrator password properties.
- **Autologon on the Host Station:** whether the host PC is set to start without the Windows logon screen and what username and password to use to bypass it. You can enable or disable autologon and define the username and password.

The "Serial Numbers" item shows a list of serial numbers of terminals that have connected to the terminal services software. For each serial number, it shows the number of licenses required for that terminal, the station number (if available), whether or not it is registered, and the location of the serial number record.

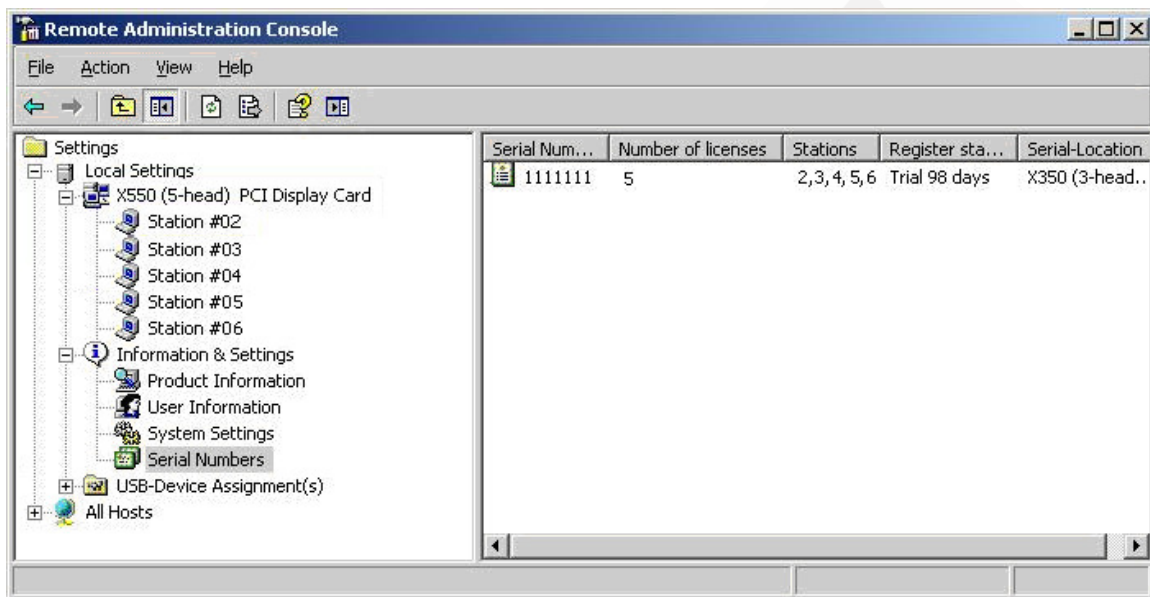




USB-Device Assignment(s)

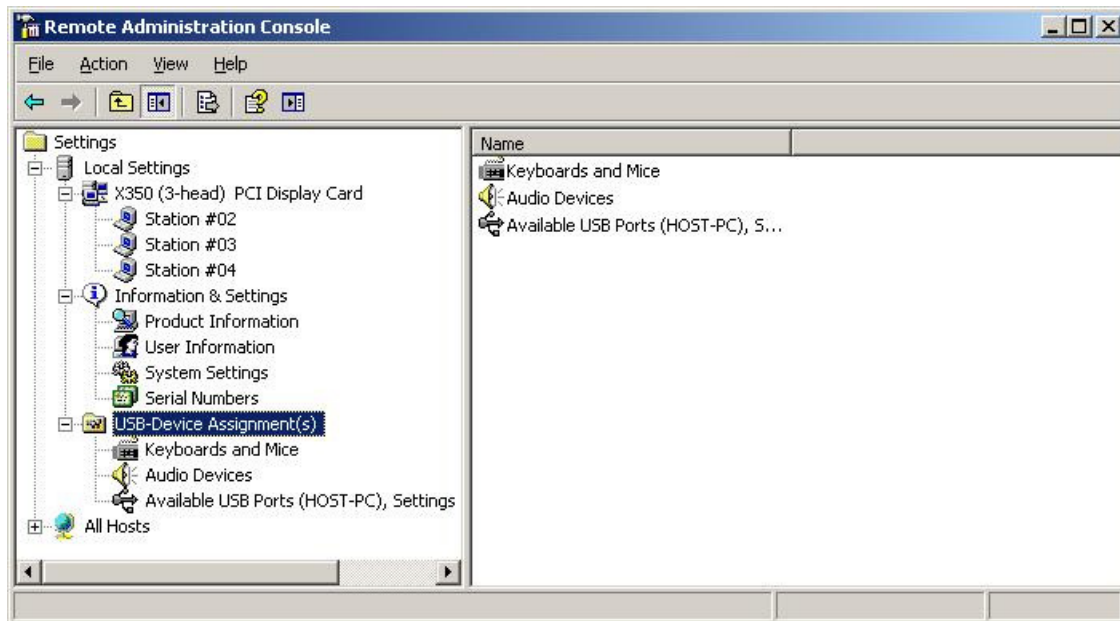


In the "USB-Device Assignment(s)" item, you can control what USB ports on the host PC are connected to which access device (station). To use this function, navigate the tree to select a connected USB device. After selecting a device, the following information will be displayed in the right hand window.

- The device's name.
- The device's description.
- A check box for "Allow all users access to every USB port". When this is selected, all stations are connected, as if on one hub. When it is not checked, there is a list "station IDs" and you select which one(s) can connect to the device.

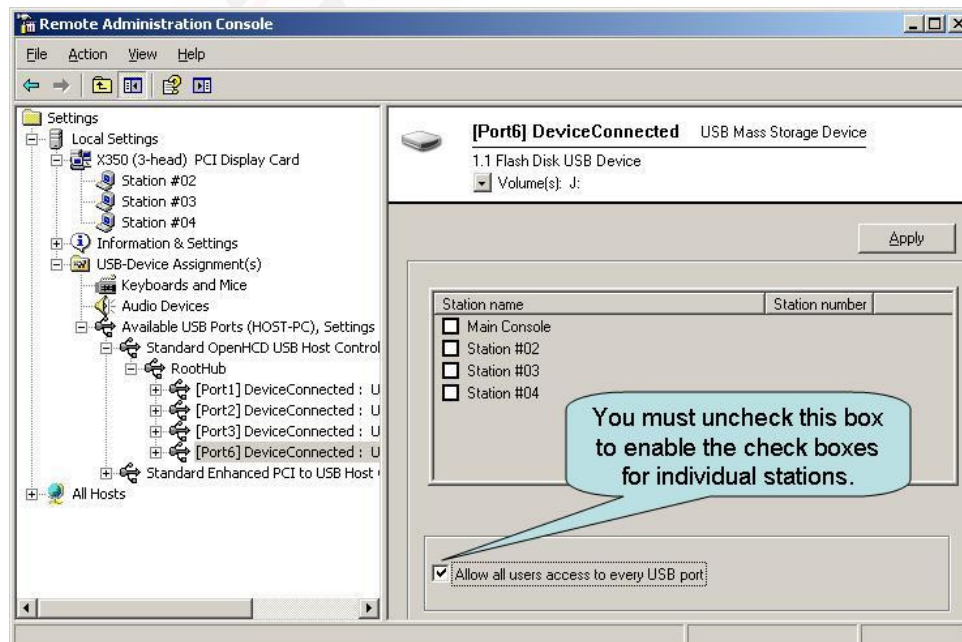

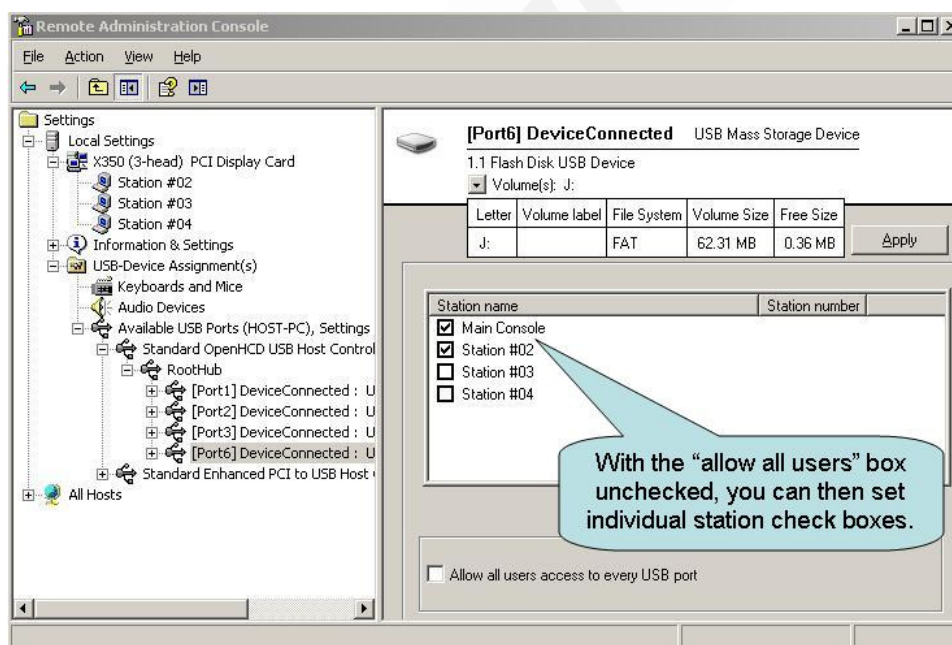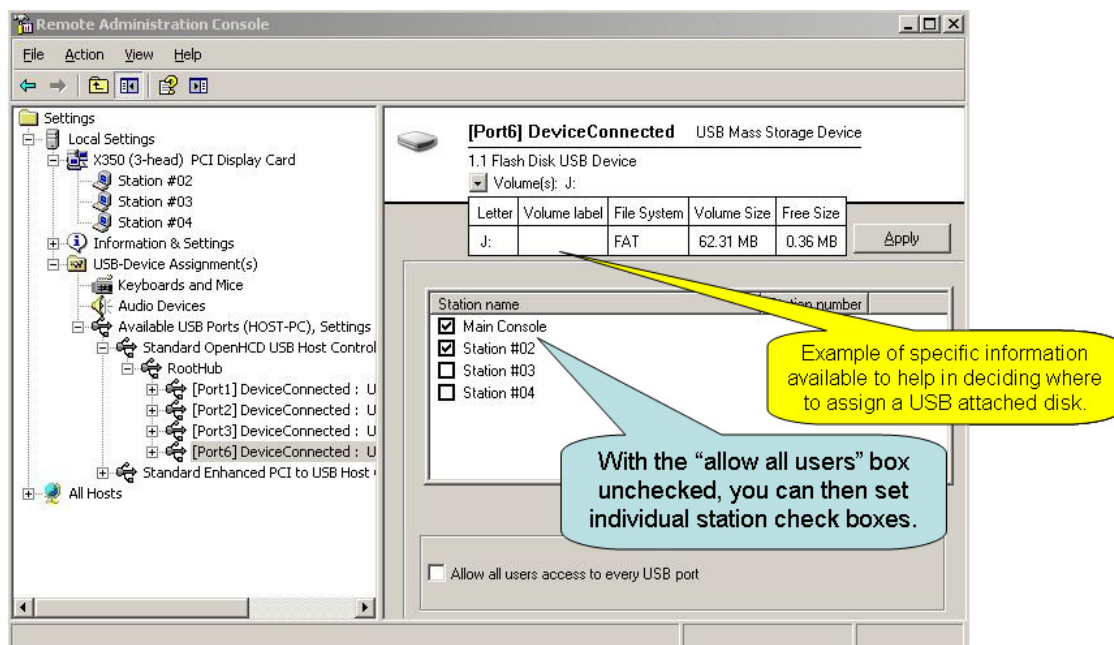

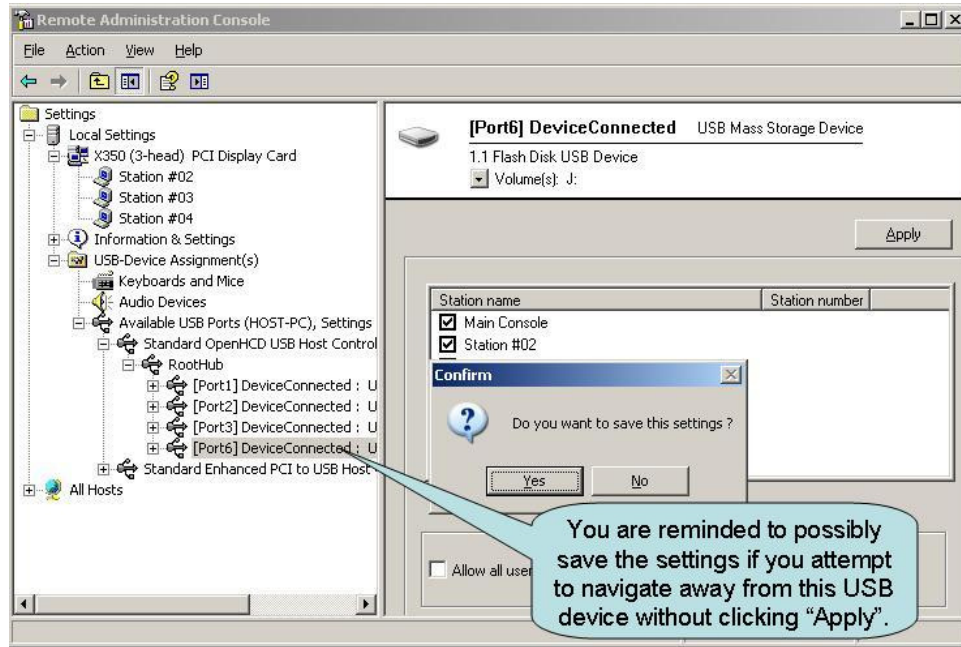

When you click on the "Apply" button, changes to the USB-Device assignments are saved. To discard changes, simply navigate to another tree item or close the console without clicking on the "Apply" button, but you will be reminded that you may wish to save the settings you made.

Warranty and Troubleshooting

You can download the applicable hardware warranty for your region by visiting the Download center in the Support section of the NComputing website at www.ncomputing.com. Refer to the following troubleshooting tips and the online NComputing knowledge base in case you encounter issues with your installation.

Error message: “Station x. stopped!”


This message appears on the access device when the station is not yet logged in or has logged off.

I can't connect to the host PC

Make sure the access device's cable is connected to the host PC, the host PC is running and the X550 card has been registered.

Checking that the X550 PCI Card and software is installed correctly

Open the control panel and then open the “System” item. Select the “Hardware” tab and open the “Multifunction adapters” item. You can check the installation status of the drivers here.

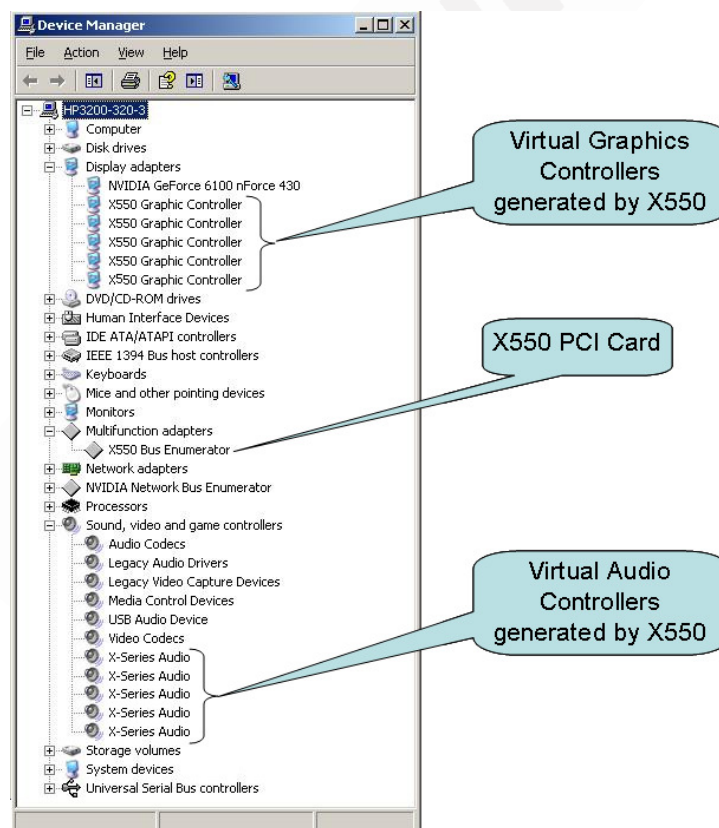

For more troubleshooting information visit the NComputing knowledge base in the support section of the NComputing website at www.ncomputing.com

Glossary

Access device (XD2): a multi-user computing station using NComputing patented technology. It doesn't use a CPU, VGA, or main chipsets. It shares resources of the Host PC using NComputing vSpace software and a PCI card containing a system on chip (SoC).

Administrator: a person who is responsible for managing a multi-user computing environment, such as a local area network (LAN). Administrator responsibilities typically include: installing and configuring system hardware and software; establishing and managing user accounts; upgrading software; and backup and recovery tasks.

Download: the network transmission of a file from one computer system to another.

Ethernet: the most widely-installed local area network (LAN) technology - specified in a standard, IEEE 802.3.

Firewall: a set of related programs that protect the resources of a private network from users on other networks and control what outside resources local users have access to.

Gateway: a network point that acts as an entrance to another network. On the Internet, a node or stopping point can be either a gateway node or a host (end-point) node.

Host PC: a computer in which the vSpace software has been installed

Internet: a worldwide system of computer networks in which users at any one computer can, if they have permission, get information from other connected computers (and sometimes talk directly with users at other computers).

Log on: Logon is the procedure by which an entity (person, program, or system) exchanges credentials with an operating system or application in order to be allowed access to the OS or application. Almost always, a logon requires that the user have (1) a user ID and (2) a password. Often, the user ID must conform to a length requirement such as eight characters or more, and the password must contain at least one digit and not match a natural language word.

User: one who uses a computer system. Users need to identify themselves to be able to access the computer system. In order to ensure unique identities, the system administrator usually assigns each user a username associated with a defined set of computer resources.

USB: (Universal Serial Bus) is a standard designed to allow peripherals to connect and identify themselves a computer via a standardized interface socket. USB allows devices to connect and disconnect from a computer without the forcing the computer to be restarted.